



LD142 Factory Parameters



To enter the parameters menu:

1. Hold down “P” until you see “Setup”
2. Press “↑” then press “P” to scroll through
3. Press “*” to save any parameter changes

Default factory settings

Unit	1dEc
rES	0.001
dir	uP
F_nn1	Yes
F_rEL	no
F_rSt	Yes
F_rEF	Yes
rEF	000.000
F_oFS	no
rESEt	No rSt